

1.5KS Filter

1. Disconnect the controller from battery positive terminal
2. Remove the 6-32 locknuts and star washers from the GND and INPUT terminals
3. Remove the input wires and install the 1.5ks filter across the GND and INPUT terminals with the **red-marked side** to the **INPUT** terminal
4. Reinstall the input wires, 6-32 locknuts, and star washers
5. Reconnect the controller to a 12V source (do not connect to the alternator output)